



Care & Maintenance of Aluminium Systems

To maintain the appearance and protective properties of your powder coated surfaces you need to routinely clean the surface to remove dirt and grime.

All you need is a gentle clean with a soft brush and mild detergent, followed by a fresh water rinse.

In normal environments cleaning should occur every 12 months, in coastal areas or environments, cleaning should occur every 3 months. In beachfront, marine environments cleaning should be increased to monthly.

Cleaning

1. Carefully remove any loose deposits with a wet sponge.
2. Wash down using a soft brush (non abrasive) and a mild household detergent solution to remove dust, salt, dirt and other deposits.
3. Rinse off with lots of clean fresh water.

DO remove any obvious deposits as they occur.

DO NOT use abrasive-steel wool , scrapers, scouring liquids or powders to remove paint splashes – these will damage your powder coating.

DO NOT use aggressive solvents, thinners, petrol etc on powder coating as these solvents will attack gloss levels and reduce its life expectancy.